Software Release 1.1.1.3



## EPM-XG Gas Engine Balancer





Software Release 1.1.1.3

## **Table of Contents**

1	Introduction	4
1.1	General	4
1.2	2 Other products from IMES	4
1.3	3 IMES-Service	4
2	Scope of supply	5
3	Important information	5
3 1	Use of the operator manual	5
1	Description	5
4		0
4.]	Introduction	6
4.2	2 Measurement functions	6
4.3	B Functional description	6
5	Operation	7
5.1	Operator buttons	7
5.2	2 Operating functions	8
OI	perating functions (continued)	9
5.3	Installation of Visualization and USB driver software	9
5.4	Select COM port of PC	11
5.5	5 Charge battery	12
5.6	6 Change battery	13
5.7	Mounting instructions	14
5.8	8 Measurements with EPM-XG	15
5.9	O Cylinder Balancing Order	16
6	Visualization software release 1.1.1.3	18
6.1	Main tool bar buttons	18
(	5.1.1 Upload measured data from EPM-XG to PC	18
(	6.1.2 Load measured data from hard disk to PC	19
(	5.1.3 Print	20
(	6.1.5         Exit	20
6.2	2 Monitoring combustion data	22
(	6.2.1 Cylinder tabs	22
(	5.2.2 Zoom function	23
(	6.2.3 "Engine Report" tab	24
(	b.2.4 "Pmax" tab	25
	5.2.6 "Engine data" tab	20
6.3	B         Open *.csv files in Excel	20



#### Software Release 1.1.1.3

7	Free internet software download	28
8	Accuracy check	29
8.1	Connecting the EPM to the pressure calibrator	30
8.2	Generating pressure with the pressure calibrator	31
8.3	Checking the EPM-XG's calibration values	34
8.4	Disconnecting the EPM from the pressure calibrator	34
9	Cleaning	35
9.1	Routine cleaning	35
9.2	Cleaning hard deposits	35
9.3	Cleaning the Thompson adaptor	36
9.4	Cleaning the cylinder pressure sensor	36
10	Installing the sensor in the Thompson adaptor	37
11	Basic diagnostic checks	38
12	Technical data	38
13	Warranty	38
14	IMES Sales and service organization	38



Software Release 1.1.1.3

### 1 Introduction

1.1 General

Thank you for choosing this **IMES** quality product. You have purchased a product which features technical innovation, high accuracy, reliability and a very long effective life.

IMES USA is the U.S. and Canadian distributor for IMES products.

#### 1.2 Other products from IMES

**IMES** offers a range of products for the measurement of pressure on combustion engines and reciprocating compressors:

- HTT Cylinder pressure sensors
- CPS Cylinder pressure sensor
- IPT Injection pressure sensors
- **EPM-XP** Electronic Indicator for diesel engines
- Compri Compression and cylinder leakage meter
- CMS Combustion monitoring system

#### 1.3 IMES-Service

Please review this manual carefully. After completing your review, if you have any questions or comments, please contact Dave Morris at IMES USA using the contact information listed below.

276-451-5265 Dave.Morris@imes-usa.com



Fig. 1: EPM-XG Gas Engine Balancer

Page 4 of 38



Software Release 1.1.1.3

## 2 Scope of supply



Fig.2: Instrument case with all components

## 3 Important information

Please study this manual carefully before using the equipment. This will ensure that you receive maximum benefits from this engine performance tuning tool with its versatile functionality, hence guaranteeing optimum benefits over its lifetime.

#### 3.1 Use of the operator manual

As stated above, we strongly recommend that you read the complete manual before using the equipment.

It was our intention to structure this manual with a clear and concise layout to allow easy and quick access to the information you are looking for. Please keep this manual in a safe place where it is always available for ready access.

We ask for your understanding that we reserve the right to change information and instructions in this manual as necessary without advance notice.



### 4 Description

4.1 Introduction

The **EPM-XG** Gas Engine Balancer is a handheld, battery powered, portable device for measuring and balancing cylinder pressures on 2-stroke and 4-stroke gas engines.

The **EPM-XG** records 50 consecutive pressure measurements (cycles) and calculates peak pressure and engine speed. The measured data are displayed in numerical format on the EPM-XG's LCD screen and can be stored in the EPM-XG's memory.

Up to 20 measured data sets can be stored in the **EPM-XG**. The data is stored in non-volatile flash memory that is retained until the data is erased or overwritten. The data is retained even if the battery dies or is removed.

The stored data can be downloaded via a USB cable to a personal computer (PC) for evaluation. Windows-based PC software for visualizing and analyzing the cylinder pressure data is included in the EPM-XG kit.

#### 4.2 Measurement functions

Pmax:	average maximum pressure of 50 cycles in psi for a single cylinder
Pave:	All-engine average of Pmax values
RPM:	engine speed
Temp:	Pressure sensor temperature in degrees C
Battery:	Battery charge in %

#### 4.3 Functional description

The EPM-XG measures cylinder pressure by means of a high temperature/accuracy strain gauge pressure sensor at the indicator valve.

Memory: Application 2 – stroke: Application 4 – stroke: for up to 20 data sets 40 – 300 RPM 200 – 1500 RPM

The battery must be recharged after approximately one hour of continuous operation.



Software Release 1.1.1.3

## 5 Operation

#### 5.1 Operator buttons



Fig. 3: Push buttons

**Remarks:** As set by the factory, the EPM-XG automatically starts in 2-stroke mode after switch-on. To configure the EPM-XG to start in 4-stroke mode, connect the EPM to a PC via the USB cable. Press "Read" and "Measure" simultaneously until the display indicates 4-stroke mode.



To switch back to default 2-stroke mode, repeat this procedure.



Software Release 1.1.1.3

## 5.2 Operating functions

Function	Button	Display	Notes
Switch On/Off	On/Off	*Cyl:1 RPM:0 4Strk Pmax:0	Basic settings that are displayed after switching on: Cyl:1 = cylinder no.1 2 stroke = 2-stroke engine 4 stroke = 4-stroke engine RPM: speed ; Pmax in psi
Selection of 2 -stroke or 4 –stroke engine	2/4	*Cyl:1 RPM:0 2Strk Pmax:0	Push the " <b>2/4</b> " button to change mode of operation to the desired value (2- or 4-stroke application) within 5 secs after power on.
Battery check	2/4	Battery ok 78% Temp.: 31°C	Push the " <b>2/4</b> " button twice to check the battery status. The temperature of the pressure sensor will also be displayed.
Sensor check	2/4	Press. Ø psi Sensor offset ok	Push the " <b>2/4</b> " button three times to check the sensor status at 0 psi. If not OK, see "Basic diagnostics checks".
Cylinder selection		Cyl:2 RPM:0 2Strk Pmax:0	Push one of the arrow buttons "↑" or "↓" to change the selected cylinder.
Cylinder balancing order		HI->LO: DN arrow LO->HI: UP arrow	Push both arrow buttons "↑" or "↓" simultaneously to invoke the cylinder balancing order feature.
Start measurement	Measure	recording cylinder 1 -	While measuring pressure the EPM-XG will display: "Recording cylinder" #
		Cyl:1 RPM:250 2Strk Pmax:856	The measured cylinder values are displayed for 1- 2 secs. The EPM-XG then automatically switches to the next cylinder.
Read Pmax	Read	Rcl:1 RPM:250 2Strk Pmax:854	The measured Pmax value for the selected cylinder will be displayed in psi.



#### **Operating functions (continued)**

Function	Button	Display	Notes
Read Engine Average Pmax	Read	Rcl:1 RPM:250 2Strk Pave:855	
Delete measurements	Read +	Cylinder 1 Data deleted!	Push "Read" and "1" simultaneously for 2 seconds to delete the currently displayed measurement.

#### 5.3 Installation of Visualization and USB driver software

The EPM-XG kit includes the **IMES** visualization software on a USB stick for displaying and analyzing the measured data.

#### Hardware requirements:

IBM PC Pentium or 100 % compatible, USB port Windows 10, 7, or XP Main memory minimum 16 MB RAM, VGA-monitor with minimum resolution of 1024 x 768 pixels.

Install the USB stick on your PC. Open the software directory and double-click on *setup.exe* for installation of the visualization and USB driver software.



The EPM-XG installer automatically installs the visualization program and USB driver and places an icon on the desktop of your computer.



Software Release 1.1.1.3



Press enter to complete the USB driver installation.



Software Release 1.1.1.3

### 5.4 Select COM port of PC

To select a COM Port:

- Connect the EPM-XG to a PC using the USB cable that was supplied with the EPM-XG kit.
- 2. Turn on the EPM-XG.
- 3. Double-click on the EPM-XG visualization software icon on the PC's desktop.



Fig.4: EPM-XG connected via USB cable to PC

Click on "Tools", then click on "Interface", then select the COM port that you want to use.

FOM VD	Uliveralization Dense Useria		
ЕРМ-ХР	Visualisation Demo Versio	on (not for sale)	
File View	Tools Info		
<mark>₽</mark> , <u>N</u> ew	View last report F6 Delete Flash	, Save all to ASC Interface Selection	
	Interface F7	device is connected.	
	Print Strg+P	COM1	
	Print all Strg+A		
-		OK <u>X</u> Cancel	



Software Release 1.1.1.3

#### 5.5 Charge battery

The EPM-XG has a rechargeable battery. Battery charging will start automatically as soon as the EPM-XG has been connected to the PC using the USB cable supplied (Figs. 5, 6, 7, & 8).



Fig. 5 USB port of EPM-XG

# Note: After you receive your EPM-XG, please connect it to a PC with the USB cable to charge the battery. To fully charge the battery, charge it for 2 hours continuously without disconnecting it from the PC!



A fully charged battery in good condition should provide about one hour of EPM-XG operation. As the battery ages, operating time will be reduced. If a charged battery provides less than 30 minutes of operation, it should be replaced with a new ANSMANN NiMH 300 mAh rechargeable battery.

Fig. 6: EPM-XG connected via USB cable to PC



Fig. 7: EPM-XG display during charging process



Fig. 8: EPM-XG display after charging process is completed

*imes* recommends recharging the EPM-XG whenever the battery charge level drops below 10% or after about one hour of use. A good practice is always to recharge the battery before making cylinder pressure measurements.

Do not remove the battery from the EPM-XG during the charging process.

When the EPM-XG and PC are connected by the USB cable, the battery charges automatically. The EPM-XG continues charging the battery until it is fully charged, then the charging process stops automatically. To obtain maximum battery charge, do not interrupt the charging process before it is stopped. The charging process is complete when the "EPM-XG charging..." message is no longer displayed.



Software Release 1.1.1.3

If the EPM-XG is used heavily and there is not sufficient time to recharge the battery with the PC between cylinder pressure measurements, an "ANSMANN Powerline 2" battery charger may be purchased that will charge two ANSMANN 9V batteries in two hours. The ANSMANN battery charger may be purchased through various Internet retailers or from IMES USA.

#### 5.6 Change battery

#### Note: Use only ANSMANN 300 mAh NiMH rechargeable batteries!

To exchange the rechargeable battery, the battery cover on the back side of EPM-XG must be removed (Figs.7, 8, & 9). Do not exchange the battery while it is being charged.





Fig.8: Rechargeable ANSMANN battery

Fig.7: Battery cover



Make sure that the battery is installed with the correct polarity!

Fig.9: Battery installed on backside of EPM-XP

**Note:** If a charged ANSMANN NiMH 300 mAh battery is not available, then a 9V Alkaline battery may be used for a short time.

If you use a 9V Alkaline battery, the EPM-XG must be disconnected from the PC immediately after uploading the measurement data to the PC!



#### 5.7 Mounting instructions

#### Measuring at the indicator valve

Before mounting the adaptor, please clear the engine indicator valve of deposits by opening it for 1-2 seconds.

#### To avoid measurement distortion:

Check the adaptor and sensor periodically for dirt and soot deposits and clean it if necessary.



Fig. 10: EPM-XG with HTT sensor mounted on the Thompson adaptor at the indicator valve

#### DANGER!

Danger of sparks and burning. The indicator valve ejects hot gases and combustion particles under high pressure. Wear insulated gloves and safety glasses!

To ensure safe operation and accurate measurements, the Thompson adapter must be firmly tightened before opening the indicator valve!



Note: Do not use a hammer or a similar tool to tighten or remove the Thompson adaptor on / from the indicator cock. Use the adaptor wrench that is supplied with the EPM-XG kit.

Fig. 11: Thompson adaptor wrench



#### Software Release 1.1.1.3

#### 5.8 Measurements with EPM-XG

- 1. Charge battery or install a charged battery before going to the engine room.
- 2. Turn on the EPM-XG and select 2 or 4 stroke mode (if needed).
- 3. Go to cylinder 1 for in-line engines or 1L for V engines.
- 4. Open indicator cock for 2 seconds and close.
- 5. Install Thompson adaptor on the first cylinder and open the indicator cock again.
- 6. Press the EPM-XG's "On" button.
- 7. Wait about 10 seconds for the cylinder pressure to stabilize.
- 8. Press "**Measure**" and wait about 5-10 seconds. The EPM-XG will display the "recording cylinder" message shown in Fig. 12.
- 9. After the EPM-XG completes the measurement cycle, it will display the measured values for two seconds (Fig. 13), then will advance automatically to the next cylinder.

#### Repeat steps 3-9 for all of the remaining cylinders.

The EPM-XG automatically displays cylinder 1L first, then indexes up to 10L, then 1R to 10R.

If your engine is an in-line engine, using 1L through 10L is recommended.

If your engine is a V engine with less than 20 cylinders, you can use the Up arrow button to index from the last left cylinder (say 6L) to the first right cylinder (1R). The EPM-XG will automatically index to 2R after 1R's pressure data is recorded.

#### **EPM-XG's Automatic Index Pattern**





Software Release 1.1.1.3



Fig.12: Display during cylinder measurement



Fig.13: Display after cylinder measurement

Remark: The EPM-XG displays an "Over Temp" warning if the sensor temperature exceeds 300°C. If this warning is displayed, remove the Thompson adaptor from the indicator valve and allow the sensor to cool for 5-10 minutes.

Remark: To conserve the battery charge, the EPM-XG turns off automatically after 2 minutes if no buttons are pressed and no cylinder pressure is detected!

#### 5.9 Cylinder Balancing Order

Cylinder Balancing Order allows the operator to collect cylinder pressures and balance the engine without having to leave the engine room.

Here's how it works:

- 1. First use the EPM-XG to collect the peak pressures from all of the cylinders. These pressures are the "As-Found" engine balance.
- 2. You can view the peak pressures (Pmax) for each cylinder by using the Up and Down arrow buttons to step through the cylinders. Push the "Read" button once to read the peak pressure for that cylinder.



Push the "Read" button a second time to display the % Out-of-Balance for that cylinder and the average peak pressure for the engine (Pave).



- 3. You may upload the "As-Found" balance pressures to a PC using the EPM-XG Visualization program. This step is optional.
- 4. If any of the cylinders are out-of-balance (not within +/-5% of the engine average), the engine needs to be balanced.



- Software Release 1.1.1.3
- 5. Push the up and down arrow buttons simultaneously for 2 seconds to make the EPM-XG list which cylinders are out-of-balance.



- 6. You can then select whether to balance from HI to LO pressures by pushing the down arrow or LO to HI pressures by pushing the up arrow.
- 7. The EPM-XG then displays all of the cylinders that are out of balance.



8. Push the down arrow button (for HI > LO) or the up arrow button (for LO > HI) to display the outof-balance cylinders one at a time.



- 9. Once you have adjusted the out-of-balance cylinders, re-measure the peak pressures for all of the cylinders. Note that the peak pressures will be different for all of the cylinders, not just the ones that you adjusted, so all of the cylinders should be re-measured.
- 10. Upload the peak pressure data to your PC using the EPM-XG Visualization program to create your "As Left" engine balance report.

Software Release 1.1.1.3



## 6 Visualization software release 1.1.1.3

### 6.1 *Main tool bar buttons*

<b>₽</b> <u>N</u> ew	Loads new cylinder pressure measurement data from the EPM-XG
[]	Opens a stored measurement data set
Save to CSV	Saves the report file to a .csv file that can be opened with MS Excel.
Print Print	Prints the current screen page
S Delete Measurement	Deletes the measurement data stored in the EPM-XG.
Save Report	Saves the EPM .EXT report file, including comments.
Ezit	Program exit

#### 6.1.1 Upload measured data from EPM-XG to PC

Start the EPM-XG visualization program. The EPM-XG must be connected via USB cable to the PC. Press "New" to upload measurement data from the EPM-XG to the PC.



Specify a filename for storing the measurement data on the PC.





Software Release 1.1.1.3

After a filename is entered the EPM-XG will upload the measurement data to the PC.



After the measurement data is uploaded it may be viewed using the visualization program.

#### 6.1.2 Load measured data from hard disk to PC

Start the EPM-XG visualization program.

Press "Open" to load measurement data from a file stored on the PC.

🙆 Open...

The measurement data may now be viewed using the visualization program.

Save to CSV file

Click "Save to CSV" to save the measurement data to an Excel (\*.csv) file.

Save to CSV

Specify where to store the file and the filename.

New File					<u>? ×</u>
Save jn:			-	🗢 🗈 💣 💷	]-
History History Desktop My Documents					
My Network P	File <u>n</u> ame: Save as <u>t</u> ype:	_Str_2_DateTime_18_ Excel csv files (*.csv)	06_2008_17_1	4_05 <b>-</b>	<u>S</u> ave Cancel



Software Release 1.1.1.3

#### 6.1.3 Print



Click "Print" to print the current screen page. Select the printer, configure properties if needed, and then click "OK".

P	rint		? ×
	Printer —		
	<u>N</u> ame:	Brother MFCJ5910DW Printer	▼ <u>P</u> roperties
	Status:	Ready	
	Type:	Brother MFCJ5910DW Printer	
	Where:	USB001	
	Comment:	MFCJ5910DW	
	Print range		Copies
	• <u>A</u> I		Number of <u>c</u> opies:
	C Pages	from: to:	
	C <u>S</u> elect	ion	
			OK Cancel

#### 6.1.4 Delete Measurement



The EPM-XG must be connected to the PC by the USB cable.

After transferring the measurement data to the PC, the operator can delete all of the measurement data in the EPM-XG by clicking "Delete Measurement". The PC will confirm that the measurement data has been deleted by displaying the window shown below.

14 flash pages to delete	12	-
page 1 of 14 deleted	v	
page 2 of 14 deleted		
page 3 of 14 deleted		
page 4 of 14 deleted		
page 5 of 14 deleted		
page 6 of 14 deleted		
		*
Canad		

Alternatively, the operator may overwrite the existing measurement data one cylinder at a time during the next measurement procedure on the engine. To delete EPM-XG measurement data one cylinder at a time, see section 5.2.



Software Release 1.1.1.3

#### Save Report



Click "Save Report" to save the report file in the .EXT file format.

The PC will display the following warning.

Warning	×
Save report dat	a to opened file?
OK	Cancel

Click "OK" if you want to overwrite the existing .EXT file with the changes that you have made on the PC. You would normally want to do this after entering information on the "Engine Report" and/or "Engine data" pages.

If you do not want to overwrite the existing file, click "Cancel".

#### 6.1.5 Exit



Click "Exit" to close the EPM-XG visualization program. Be sure to click "Save Report" first if you have made changes to the "Engine Report" or "Engine data" pages that you want to save.



#### 6.2 Monitoring combustion data

#### 6.2.1 Cylinder tabs



The cylinder tabs display a graph of the peak pressure measured on 50 consecutive engine cycles. The cylinder number, the average peak pressure and RPM measured over the 50 cycles, and the 2/4 stroke mode are displayed above the graph.

The user can adjust the peak pressure scale.



## 6.2.2 Zoom function



The user may zoom in or out on the Pmax curve.

**Zoom function on**: Hold the left mouse button down and drag across the curve from the top left down to the bottom right corner.

**Zoom function off:** Hold the left mouse button down and drag across the curve from the bottom right to top left corner.



Tools Info							
N	<b>1</b>			<b>F</b> )			
New 10 Upen	Ip Save to LSV	int 🔯 Dei Meas	. 📁 Save Report 📕	EXI			
2L 3L	4L 5L	6L   1R   2R	3R 4R 5R	6R Engine Repo	rt Pmax Pmax	Balance Engine data	
1 1	1 1	Speed	PR Ave	DD Std dov	DD may	 	DD Dolta
		IRPM1	[nsid]	Insil	[nsia]	[nsia]	nei
	1L	329	480	20	517	428	1
	2L	329	447	33	498	331	-32
	3L	329	504	16	538	450	25
	4L	329	463	56	526	285	-16
	5L	330	467	53	535	367	-12
	6L	330	497	20	529	404	18
	1R	330	476	45	529	346	-3
	2R	330	467	43	529	337	-12
	3R 4D	330	498	29	547	383	19
	414	330	444	26	544	234	-30
	5D	330				71.4	
	5R 6R	330	516	25	550	440	37
	5R 6R All	330 330 330	516 479	25 34	550 550	440 285	37
UnitID: Location: Strake:	5R 6R All	330           330           330           330           Unit Mfr.           Unit Mfr.	493 516 479	Air Manifold Press, JinH Air Manifold Trenp, FF: Arbinat Tarp, FF:	550 550	440 285 Turbo Speed (rpm): Unit Load [%]: Wastogate Dep [%]:	37
UnitID: Location: Stroke: Date:	5R 6R All	330         330           330         330           330         330           Unit Mfr.         Potation:           Bore:         1		Air Manifold Press, IinH Air Manifold Temp, [F]: Ambient Temp, [F]: Ignition (F):	550 550	440       285   Turbo Speed [rpm]: Unit Load [%]: Wastegate Pos. [%]: Date/Time	37
UnitID: Location: Stroke: Date: Serial No :	5R 6R All	330 330 330 330 330 4 330 330 330 330 33		Air Manifold Press. [inH Air Manifold Temp. [F]: Ambient Temp. [F]: Ignition Timing [DBTDC	550 550	440 285 Turbo Speed (rpm): Unit Load (%): Wastegate Pos. (%): Date/Time:	37
UnitID: Liccation: Stroke: Date: Serial No.: Remark:	5R 6R All	330         330           330         330           330         330           Unit Mfr.         Potetion:           Bore:         # Cycles:		Air Manifold Press. [inH Air Manifold Temp. [F]: Ambient Temp. [F]: Ignition Timing [DBTDC	550 550	440 285 Turbo Speed (rpm): Unit Load [%]: Wastegate Pos. [%]: Date/Time:	37
Unit ID: Location: Stroke: Date: Serial No: Remark: Analyst Name:	5R 6R All	330         330           330         330           330         330           Unit Mir.         Unit Mir.           Bore:         # Ovcles:	493 516 479	Air Manifold Press. [inH Air Manifold Temp. [F]: Ambient Temp. [F]: Ianition Timina (DBTDC	550 550 Analyst Signat	Turbo Speed (rpm): Unit Load [%]: Wastegate Pos. [%]: Date/Time:	37

### 6.2.3 "Engine Report" tab

The "Engine Report" tab provides a summary report for the engine. The following information is provided based on the measured cylinder pressure over 50 cycles.

Parameter	<u>Units</u>	Description
Speed	RPM	The speed measured for each cylinder and an engine average speed.
PP Ave	psi	The average peak pressure for each cylinder and for the engine.
PP Std. dev.	psi	The standard deviation of the peak pressure distribution for each cylinder. "All" is the average standard deviation for all cylinders.
PP max	psi	The maximum peak pressure for each cylinder and the engine.
PP min	psi	The minimum peak pressure for each cylinder and the engine.
PP Delta	psi	"PP Ave" for the cylinder – "PP Ave" for the engine (All)

At the bottom of the page is engine information recorded by the operator for the test set.



Software Release 1.1.1.3



#### 6.2.4 "Pmax" tab

The "Pmax" tab displays the peak pressure measured for each cylinder in bar chart form. The engine's average peak pressure, "Pmax mean" is displayed as a horizontal line.



Software Release 1.1.1.3



#### 6.2.5 "Pmax Balance" tab

"Pmax Balance" shows the peak pressure difference for each cylinder relative to the engine average in bar chart form. The light green lines and bars show the +/-5% thresholds.

#### 6.2.6 "Engine data" tab

	-M	easurement condition			
		Scav. air press. [psi]	20.0	ОК	
Enter the scavenging air pressure (charge air pressure) in psi, then click "OK".					

NB: On 4-stroke engines "scavenging air pressure" is frequently referred to as "charge air pressure", i.e. the turbocharging pressure.



Software Release 1.1.1.3

#### 6.3 Open \*.csv files in Excel

Start Excel and select the desired \*.csv file (Microsoft Office Excel Comma Separated Values File).



Excel will display an engine report file with the following format.

EPM-XG ENGINE BALANCE REPORT							
Cyl. Sp	eed PF	Ave STE	DEV PP	MAX PP	Min	PP Delta	
	281	ig psi 514	24 PSI	y psi 574	y 304	24 PSI	
2	280	483	37	543	379	.3	
3	281	461	39	537	297	-19	
4	280	554	25	601	501	74	
5	280	548	50	622	355	68	
6	278	393	57	546	327	-87	
7	280	379	82	522	279	-101	
8	279	532	41	610	428	52	
9	280	586	58	714	455	106	
10	280	427	104	601	288	-53	
11	280	544	35	622	467	64	
12	281	336	74	498	273	-144	
All	280	480	53	714	273		
Unit ID:		907	Мс	del:		KVS412FT	
Location:	Sł	elbyville	Un	it Mfr.:		IR	
Stroke:		4	Ro	tation:			
Date:	6/	21/2012	Bo	re:		5 1	n
Serial No.:		1					
Air Manifold P	ress.:	20 inH	G Tu	rbo Speed:		10000	rpm
Air Manifold T	emp.:	80 F	Un	it Load:		80 '	%
Ambient Tem	o.:	70 F	Wa	astegate Po	sition:	65 '	%
Ignition Timing	g:	10 DB	FDC				
# Cycles:			50				
Date/Time:		050	412 11:30a	am			
Engine Average	Engine Average PP: 480 psig						
Current Balance: 30 %							
5% Out-of-Balance Threshold: 24 psi							
Cylinders Out of Balance: 1 4 5 6 7 8 9 10 11 12							
Remarks:							
Analyst Name	:						
Analyst Signat	ture:					Date:	



Software Release 1.1.1.3

## 7 Free internet software download

Customers can check IMES' website for new EPM-XG Visualisation software releases free of charge.

Please enter the following address into your internet browser: <u>http://www.imes.de/downloads/software/epmxgvis.zip</u>

The following window will be displayed:

Authentication Re	quired	× 1		
The server www.imes.de:80 requires a username and password. The server says: Restricted Directory.				
User Name: Password:				
	Log In Canc	el		

For your user name and password please contact Dave Morris at IMES USA.



Software Release 1.1.1.3

## 8 Accuracy check

The EPM-XG is calibrated by IMES' at pressures ranging from 0 to 150 bar (0 to 2175 psi) and temperatures ranging from 50°C to 200°C. The calibration points are listed on the EPM's calibration certificate (see fig.18). A calibration certificate is delivered with each new EPM.

The EPM-XG uses the very stable and long life HTT cylinder pressure sensor. IMES recommends checking the EPM calibration annually using a hydraulic oil pressure calibrator. See section 8.1.



Fig.14: EPM Calibration certificate



#### 8.1 Connecting the EPM to the pressure calibrator

Connect the EPM's Thompson adaptor to pressure calibrator as shown in Fig.19. Tighten the Thompson adapter using the adapter wrench then check for leakage at the adaptor by generating pressure.



Fig.15: Connecting the EPM to the pressure calibrator

Note: The pictured pressure calibrator is an example of a handheld pressure calibrator used to generate calibration pressures. Other types of calibrated pressure sources may also be used.

Software Release 1.1.1.3



## 8.2 Generating pressure with the pressure calibrator

Be sure to check the EPM calibration at most frequently measured Pmax values for your engine(s).

The following calibration example is for pressure values at 0 bar (0 psi), 50 bar (725 psi) and 100 bar (1450 psi).



Fig.16: Generate 0 bar (0 psi) with the pressure calibrator



Software Release 1.1.1.3



Fig.17: Generate 50 bar (725 psi) with the pressure calibrator



Fig.18: Generate 100 bar (1450 psi) with the pressure calibrator

Page 32 of 38



Software Release 1.1.1.3

#### Calibration procedure:

- 1. Turn on the EPM-XG
- 2. Generate 0 pressure with the pressure calibrator
- 3. Press the EPM's "2/4" button 3 times. The static pressure value will be displayed
- 4. Generate the maximum expected pressure with the pressure calibrator
- 5. Check displayed pressure
- 6. Compare the pressures generated by the pressure calibrator with the pressures displayed by the EPM-XG



#### 8.3 Checking the EPM-XG's calibration values

Calibration Pressure (psi)	EPM Measured Pressure (psi)	Deviation (+/- psi)
0	0	0
725	715	10
1450	1442	8

The EPM-XG's accuracy specification is +/- 0.5% of full scale range (0...2000 psi) between 50°C and 200 °C.

At room temperature (20-25 C), the EPM-XG's accuracy is +/-1.0% of full scale range. The maximum acceptable difference between the calibration pressure and EPM-XG measured pressure (deviation) is +/-20 psi. If any of the calibration points have a deviation greater than +/-20 psi the EPM-XG should be returned to IMES for recalibration.



Fig.19: Calibration check example

#### 8.4 Disconnecting the EPM from the pressure calibrator

Disconnect the EPM's Thompson adaptor from pressure calibrator, and then remove the hydraulic oil from the sensor and adapter using compressed air.



Software Release 1.1.1.3

## 9 Cleaning

#### 9.1 Routine cleaning

Periodically clean the HTT sensor's gas channel using compressed air.



Fig. 20: Cleaning the gas channel with compressed air

#### 9.2 Cleaning hard deposits

- 1. Remove the spring retaining screw with a 2.5 mm Allen wrench (Fig. 21)
- 2. Remove the spring from the Thompson adaptor
- 3. Remove the sensor from the Thompson adaptor using 19 mm and 22 mm wrenches (Fig. 22)
- 4. We recommend placing the adaptor-sensor assembly in a vice





Fig.21: Removing the adaptor spring

Fig.22: Removing the HTT sensor from the adaptor



Software Release 1.1.1.3

#### 9.3 Cleaning the Thompson adaptor

Use a hand drill with 2.5 mm bit to clean the gas channel of the Thompson adaptor.





Fig. 23: 2.5 mm bit & ratchet tap wrench

Fig. 24: Cleaning the adaptor with the drill

Clean the gas channel of the Thompson adaptor with a 2.5 mm drill bit. A ratchet tap wrench is ideal for gently rotating the drill bit.

#### 9.4 Cleaning the cylinder pressure sensor

Use a 2.5 mm bit to clean the gas channel of the HTT cylinder pressure sensor. A ratchet tap wrench is ideal for rotating the drill bit. The length of gas channel is 29 mm. Mark the drill bit 28 mm from the tip. **Do not drill deeper than 28 mm into gas channel!** 



Fig. 25: The 2.5 mm drill bit with mark at 28 mm



Fig. 26: Cleaning the sensor gas channel



## **10** Installing the sensor in the Thompson adaptor

To ensure operator safety, the HTT sensor must be tightly installed in the Thompson adaptor. Use 19 mm and 22 mm wrenches as shown in Fig. 20 to tighten the sensor.

Use a crow's foot socket in a torque wrench instead of one of the open jaw wrenches to check the maximum torque of 40 ft. lbf (30 Nm).



Fig. 27: Removing the adaptor spring



Fig.28: Installing the HTT sensor in the adaptor



Fig. 29: Thompson adaptor wrench

Note: Do not use a hammer or a similar tool to tighten or remove the Thompson adaptor on / from the indicator cock. Use the adaptor wrench that is supplied with the EPM-XG kit.



## 11 Basic diagnostic checks

Before contacting your local agency or service partner, please check the troubleshooting guide below.

Problem	EPM-XG Display	Action
EPM-XG display is blank after pushing the "On/Off" button.		Recharge the battery. See section 5.5.
Over temperature indication The EPM-XG will display "Over Temp" if the temperature of the sensor measuring cell exceeds 300 °C.	*Cyl:1 RPM:0 Over Temp.!	Disconnect the Thompson adaptor from the indicator valve and let it cool for 5-10 minutes.
High offset	Press. 0 psi Sensor offset hi	Sensor is out-of-calibration or defective. Return the EPM-XG to IMES for repair.
No signal Engine speed is lower than 10 RPM or the Indicator valve is closed	no si9nal	Open indicator valve

## 12 Technical data

Measuring range	02000 psi
Accuracy (EPM-XG incl. HTT cylinder pressure sensor)	<u>&lt;</u> 0.5 % Full Scale
Max. temperature at measuring cell	300 °C
Storing capacity	20 measurements / engine
Interface	USB
Battery	ANSMANN NiMH 300 mAh rechargeable 8.4 V E-block batteries
Dimension	200 x 50 x 80 mm
Weight (incl. battery)	1200 g

## 13 Warranty

The warranty period is 12 month after delivery according to the General Terms and Conditions of the Electrical Industry of Germany.

## 14 IMES Sales and service organization

https://www.imes.de/sales-team.html